


OWNER'S MANUAL

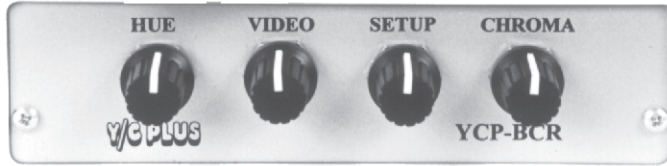


BCR & BCR-S FRONT

YCP-BCR & YCP-BCR-S

TBC REMOTE CONTROL FOR:
BETACAM, DIGITAL DVCAM,
PRO S-VHS, & EVO 9850 HI8



BCR-S BACK

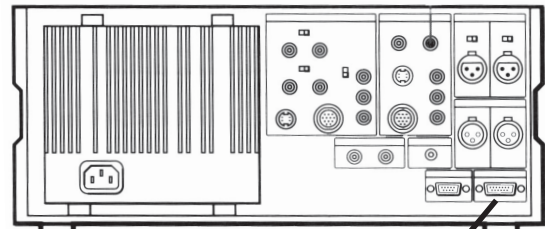

Sony BetaCam
UYW 1800

15 pin
CONNECTS HERE

The **BCR/BCR-S** are designed to control the built-in Time Base Correctors (TBC) in the Sony UYW, PVW, BVW BetaCam players and recorders. These TBC remote controls are also designed to operate the TBC's in the EVO-9850 Hi8 players and recorders. The **YCP-BCR/BCR-S** controls are the basic controls for the Hue (Phase), Chroma (Color), Video and Setup (Black levels) using center dent unity knobs. In addition the **YCP-BCR-S** has system controls, Sync Phase, Sub-Carrier Phase, and Y/C Delay. These controls are located in the back of the unit with inset controls for the engineer. The **YCP-BCR-S** controls are for more complicated system timing and can be added to the basic **YCP-BCR** at a later time if required.


The **YCP-BCR/YCP-BCR-S** connect to the decks via the supplied ten (10) foot 15 pin cable.

To Rackmount: Remove knobs and nuts from the unit. Remove the two (2) screws, front plate and bezel. The front bezel **IS NOT USED** with the rackmount. Place box behind rackmount. Place front plate in front of rackmount, using the longer screws supplied, secure the front plate to the rackmount and TBC unit. Replace nuts and knobs.

Blank panels are supplied with rackmount to cover any unused slots.



YCP-RM: (3) UNIT RACKMOUNT

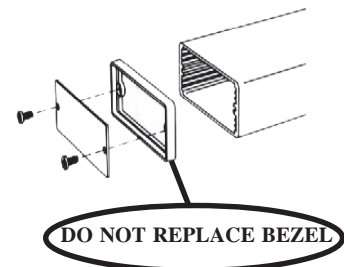

DO NOT REPLACE BEZEL